

AFRL-ML-TY-TP-2004-4561



ANTIMICROBIAL EFFICIENCY OF IODINATED INDIVIDUAL PROTECTION FILTERS

**Brian K. Heimbuch, George Laventure, Robert McDonald, Eila Burr
Applied Research Associates
PO Box 40128
Tyndall AFB, FL 32403**

**Eric Proudfoot, Joseph Wander
Airbase Technologies Division
Air Force Research Laboratory
Tyndall AFB, FL 32403**

Final Technical Paper, November 2004

**DISTRIBUTION STATEMENT A: Approved for public release,
distribution unlimited.**

**Air Force Research Laboratory
Materials and Manufacturing Directorate
Airbase Technologies Division
139 Barnes Drive, Suite 2
Tyndall AFB, FL 32403-5323**

REPORT DOCUMENTATION PAGE					<i>Form Approved OMB No. 0704-0188</i>	
<small>The public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing the burden, to Department of Defense, Washington Headquarters Services, Directorate for Information Operations and Reports (0704-0188), 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302. Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to any penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number.</small> PLEASE DO NOT RETURN YOUR FORM TO THE ABOVE ADDRESS.						
1. REPORT DATE (DD-MM-YYYY) 30-11-2004		2. REPORT TYPE PREPRINT Journal Article			3. DATES COVERED (From - To) 01-01-2004 to 30-11-2004	
4. TITLE AND SUBTITLE Antimicrobial Efficiency of Iodinated Individual Protection Filters					5a. CONTRACT NUMBER F08630-03-C-0013	
					5b. GRANT NUMBER	
					5c. PROGRAM ELEMENT NUMBER 106013	
					5d. PROJECT NUMBER ARMT	
6. AUTHOR(S) Brian K. Heimbuch, Eric Proudfoot, Joseph Wander, George Laventure, Robert McDonald, Eila Burr					5e. TASK NUMBER 0073	
					5f. WORK UNIT NUMBER ARMT0073	
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) Applied Research Associates PO Box 40128 Tyndall AFB, FL 32403					8. PERFORMING ORGANIZATION REPORT NUMBER	
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES) Air Force Research Laboratory Materials and Manufacturing Directorate 139 Barnes Drive, Suite 2 Tyndall AFB, FL 32403-5323					10. SPONSOR/MONITOR'S ACRONYM(S)	
					11. SPONSOR/MONITOR'S REPORT NUMBER(S) AFRL-ML-TY-TP-2004-4561	
12. DISTRIBUTION/AVAILABILITY STATEMENT Distribution Statement A: Approved for public release; distribution unlimited.						
13. SUPPLEMENTARY NOTES						
14. ABSTRACT The Air Force Research Laboratory (AFRL) has a broad interest in oxidizing-agent and photoactivated oxidizing agents that, when applied to textiles and other materials, will act as broad spectrum antimicrobials. For this project, poly(styrene-trimethylammonium triiodide) was incorporated into filtration devices to augment filtration. The overall goal of the project is to replace existing HEPA media with an antimicrobial membrane for both individual protection and collective protection devices. In this report we investigate the microbial efficacy of an iodinated Clip-On prototype and a commercial-off-the-shelf (COTS) carbon-HEPA aerosol canister. Our data indicate that the Clip-On, in series with a COTS canister provides an additional 2 logs of attenuation vs. a standard COTS canister when challenged with MS2 coliphage.						
15. SUBJECT TERMS						
16. SECURITY CLASSIFICATION OF:			17. LIMITATION OF ABSTRACT UU	18. NUMBER OF PAGES 9	19a. NAME OF RESPONSIBLE PERSON Joseph D. Wander	
a. REPORT U	b. ABSTRACT U	c. THIS PAGE U			19b. TELEPHONE NUMBER (Include area code) 850-283-6240	

NOTICES

USING GOVERNMENT DRAWINGS, SPECIFICATIONS, OR OTHER DATA INCLUDED IN THIS DOCUMENT FOR ANY PURPOSE OTHER THAN GOVERNMENT PROCUREMENT DOES NOT IN ANY WAY OBLIGATE THE US GOVERNMENT. THE FACT THAT THE GOVERNMENT FORMULATED OR SUPPLIED THE DRAWINGS, SPECIFICATIONS, OR OTHER DATA DOES NOT LICENSE THE HOLDER OR ANY OTHER PERSON OR CORPORATION; OR CONVEY ANY RIGHTS OR PERMISSION TO MANUFACTURE, USE, OR SELL ANY PATENTED INVENTION THAT MAY RELATE TO THEM.

THIS TECHNICAL PAPER HAS BEEN REVIEWED AND IS APPROVED FOR UNLIMITED RELEASE.

/s/

**JOSEPH D. WANDER, Ph.D
Program Manager**

/s/

**JIMMY L. POLLARD., Colonel, USAF
Chief, Airbase Technologies Division**

This report is published in the interest of scientific and technical information exchange and does not constitute approval or disapproval of its ideas or findings.

Do not return copies of this report unless contractual obligations or notice on a specific document requires its return.

ANTIMICROBIAL EFFICIENCY OF IODINATED INDIVIDUAL PROTECTION FILTERS

B.K. Heimbuch¹, E. Proudfoot², J. Wander², G. Laventure¹, R. McDonald¹, E. Burr¹.

¹ Applied Research Associates, Tyndall Air Force Base, FL 32403

² Air Force Research Laboratory, Tyndall Air Force Base, FL 32403

ABSTRACT

The Air Force Research Laboratory (AFRL) has a broad interest in oxidizing agent and photo activated oxidizing agents that when applied to textiles and other materials will act as broad spectrum antimicrobials. For this project poly(styrene-trimethylammonium triiodide) was incorporated into filtration devices to augment filtration. The overall goal of the project is to replace existing high efficiency particulate air (HEPA) media with the antimicrobial membrane for both individual protection and collective protection devices. In this report we investigate the antimicrobial efficacy of an iodinated clip-on prototype and a commercial-off-the-shelf carbon HEPA aerosol canister (COTS). Our data indicate that the clip-on, in conjunction with a COTS canister, provide an additional three logs of protection versus a standard COTS canister when challenged with MS2 coliphage.

INTRODUCTION

Biological weapons are not new, and have been used as warfare agents for thousands of years (5). The United States, the Soviet Union, and many other countries had active programs aimed at developing bio-warfare agents (3, 6, 7). It is widely accepted that many bacterial and viral agents were weaponized (2,4,7). The extraordinary events of terror carried out in the United States and overseas in the last decade, in conjunction with the instability in the former Soviet Union and the Middle East, has lead to speculation that biological weapons could be used to inflict mass casualties on either military or civilian installations (3,10). The anthrax attacks carried out in the United States after 9/11 demonstrated how easy it is to carry out bio-attacks. If an attempt had been made to aerosolize the biological agent the casualties may have been much higher.

The devices currently used for protection from a biological attack utilize HEPA filters. HEPA filters are 99.97% efficient at removal of 0.3 μ m particles such as potassium chloride (KCl) or dioctyl phthalate (DOP) (1,8). While 99.97% is very good, a challenge of 10⁶ particles should yield a penetration of 300 particles. This is especially significant when dealing with biologicals that have a minimum infectious dose (MID) of well below 300 particles. It is thought that for many of the bio-weapons viruses (0.05 μ m to 0.3 μ m in size), the minimum infectious dose is <100 plaque-forming units (PFU) (3). Therefore the HEPA filter may not be adequate to protect the user from infection when challenged with high loads of viruses. In addition HEPA filters have large pressure drops that are exhausting to the user in individual protection (IP) and are costly to run in collective protection (CP).

In an attempt to enhance the capability of IP filters, AFRL is evaluating filters that contain antimicrobial agents. For this study, prototypes that incorporate poly(styrene-trimethylammonium triiodide) as the antimicrobial were evaluated (Triosyn Corp., Williston, Vt.). The iodinated filters are thought to kill the organisms as they pass through the filter, which

augments mechanical filtration. The goals of the project are to reduce penetration of biologicals below the MID of the pathogens potentially used as bio-weapons and to reduce the pressure drops of the canisters. The product evolution for IP was designed to go through three phases: 1) a clip-on device, as a proof on concept, that augment existing COTS canisters; 2) a COTS canister with the antimicrobial integrated into the canister; 3) a canister that replaces the HEPA filter with the antimicrobial filter. The design of the final prototype aims to provide all the current specifications of COTS canisters but also adds the enhanced antimicrobial protection and a lower pressure drop. This paper covers the initial work in which COTS canisters and the iodinated clip-on prototypes were challenged with aerosolized MS2 coliphage.

EXPERIMENTAL METHODS *Escherichia*

coli (ATCC 15597) was maintained on trypticase soy agar (Difco 236950) at 37°C. MS2 coliphage (ATCC 15597-B1) stock solutions were produced according to standard protocols (9).

A customized Bio-Aerosol Testing System (BATS) (Triosyn Corp, Williston, Vt.) was used to generate the MS2 aerosol and to challenge the test articles. The bio-aerosol was generated using Colison nebulizers and was then drawn through the filters for eight hours at a rate of 85 L/min. One port did not contain a canister so that the challenge load to the filters could be determined. Viable viruses in the effluent were captured in all glass impingers (AGI) that contained 100 ml of 1X PBS (pH 7.4). Standard phage counts were done to determine the amount of viable MS2 that penetrated each filter. The specific protocols for challenging canisters with MS2 were as follows:

1. Challenge canisters were glued onto retaining plates and attached to the BATS. The canisters were suspended in the BATS with only the threaded connection not exposed to the viral challenge.
2. AGIs (Chem. Glass CG-1822-04) containing 100 ml of buffer (1X PBS pH 7.4 + 0.001% antifoam A (Sigma A6457) were plumbed to the BATS system (each port/filter used 2 AGIs).
3. Flow rates for each filter/port were calibrated to 85 L/min.
4. 1.5 ml of the MS2 stock ($\sim 10^{11}$ PFU/ml) was added to 150 ml of sterile water. The solution was divided equally into three Collison nebulizers (BGI Inc., Waltham, Mass.). The nebulizers were then attached to the BATS.
5. The run was started by pressurizing the nebulizers to 20 psi and starting the vacuum to draw the aerosol through the canisters.
6. The instrument was stopped at 0.5, 1, 2, 3, 4, 5, 6, 7, and 8 hr time points. At each time point the impingers were replaced with impingers containing fresh buffer. At hours 3 and 6 the nebulizers were replenished with more MS2 stock solution.
7. At each sampling point 10 ml were removed from each impinger and placed in sterile test tubes. For the positive control the solution was serially diluted 1/10 out to 10^{-6} .
8. Phage plating was done in triplicate for each impinger and for the 10^{-4} , 10^{-5} , and 10^{-6} dilution of the positive control. One ml of the sample was mixed with one ml of mid log phase *Escherichia coli* (grown in special MS2 media (1% tryptone, 1% NaCl, 0.5% yeast extract) for 2.5 hours at 37°C with shaking at 200rpm) and 9 ml of 50°C MS2 media (1% tryptone, 0.8% NaCl, 0.1% yeast extract, 0.1% dextrose, 4mM CaCl \cdot 2H $_2$ O, 0.001% thiamine, 1% agar). The mixture was inverted three times then poured into 100X15mm Petri dishes. The plates were incubated overnight at 37°C then the plaques were counted the following day.
9. The total plaque-forming units for each filter was determined by multiplying to the average number of the countable plaques from both impingers (2 impingers per port/filter) X dilution X

180 ml (the impingers have ~10% loss of liquid during the run). The detection limit for the method was 30 PFU/sampling period.

RESULTS AND DISCUSSION


All eighteen COTS canisters were penetrated by MS2 coliphage (fig. 1, table 1). The average penetration was 4,424 PFU; however, the penetration was highly variable with a standard deviation equivalent to the mean. Analysis of the penetration on an hourly basis (fig 2) indicates that the penetration was constant yielding a linear response over the 8-hour test period. The MS2 penetration is not a surprise because the HEPA is only 99.97% efficient and thus penetration would be expected. In fact, given the challenge loads of $\sim 10^{10}$ PFU the penetration was expected to be greater than what was observed. This suggests that the COTS canisters are actually performing at greater than 99.97% efficiency. However, the test measures only viable particles and there may be mechanical forces that are killing some of the MS2 as it penetrates the filters. There are likely to be many forces that determine that actual viable MS2 penetration. However, it is clear that viable viral particles penetrate the filter in amount well in excess of the MID for the bio-warfare viruses.

Table 1: PFU counts of MS2 penetration and total challenge for eight-hour test


Samp. num.	COTS		Iodinated Clip-On + COTS	
	MS2 in effluent*	MS2 pos. cont. challenge	MS2 in effluent*	MS2 pos. cont. challenge
1	1920	1.09E+09	180	2.45E+10
2	1312	2.69E+08	450	2.45E+10
3	737	2.69E+08	180	2.45E+10
4	178	2.69E+08	120	5.69E+09
5	380	2.69E+08	30	5.69E+09
6	2190	3.40E+09	60	4.50E+11
7	5130	3.40E+09	0	4.50E+11
8	7050	3.40E+09	0	2.80E+09
9	1530	3.40E+09	0	2.80E+09
10	8370	3.40E+09	60	7.53E+10
11	17100	2.45E+10	60	7.53E+10
12	4350	2.45E+10		
13	7410	6.50E+09		
14	4410	6.50E+09		
15	2700	5.70E+09		
16	5280	4.50E+11		
17	660	2.80E+09		
18	6420	7.50E+10		
19	6960	5.78E+09		
Average	4424	3.27E+10	104	1.04E+11
Stdev	4283	1.03E+11	137	1.80E+11

* detection limit is 30 PFU for each sampling period



The iodinated clip-on, when used with the COTS canister provided a three log increase in bio efficacy versus the COTS canister alone (figs 5, 6). The average penetration through the clip-on + COTS canister was 104 PFU with a standard deviation equivalent to the mean (fig 3, 4). The actual variability of the MS2 penetration varied from undetectable levels for three of the canisters up to 450 PFU for one of the canisters. The variability may be due to seal leaks and inconsistent manufacturing processes. All the clip-on units were individually made and thus were subject to individual variations. The seal issue in

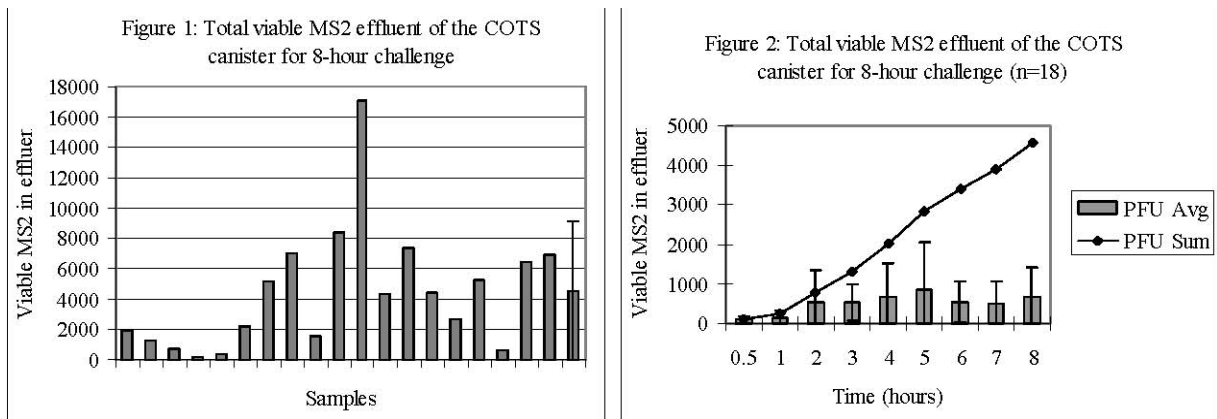

question was the junction between the clip-on unit and the COTS canister. The specification of the outer ring diameter for the COTS canister used for this study was variable and thus in some instances there may not have been a good seal between the clip-on and the COTS canister. From a very practical stand point we do not expect that the clip-on unit will ever be fielded. It adds weight to the canister and is bulky and impairs the vision of the user. However, it allowed us a first test to determine the feasibility of the iodinated membrane.

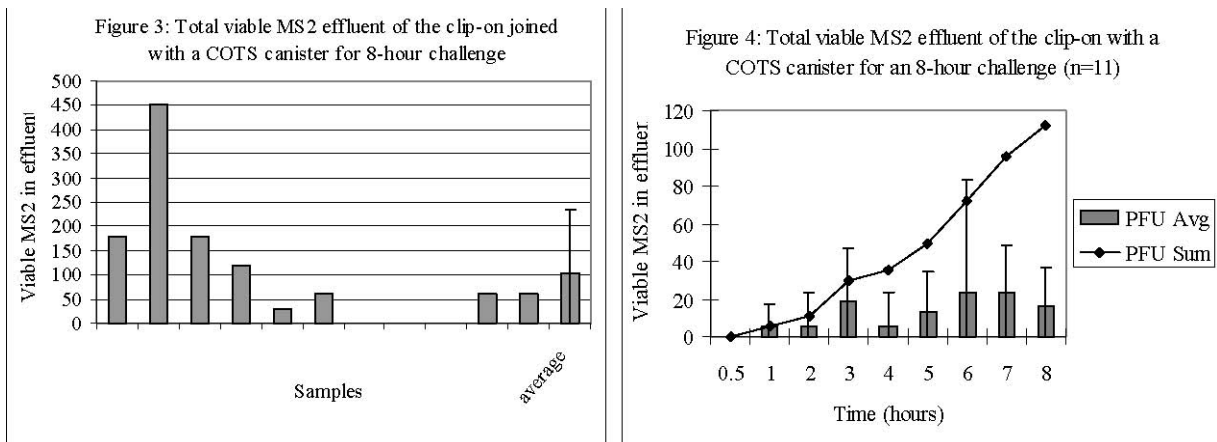

The mechanism by which the clip-on is reducing viral particles is thought to take place by the viral particles coming in contact with the iodine. As organisms pass through the filter, iodine is also selectively released and kills the organisms. Based on small-scale media tests, the iodinated membrane attenuated viral penetration by 4 logs versus an untreated membrane (Trioyesn - unpublished). Also, the iodinated media was proven to be biocidal against various bacteria, spore formers, and MS2 (Trioyesn - unpublished). We have yet to run the control experiment in which the non-iodinated clip-on is used in conjunction with the COTS canisters.

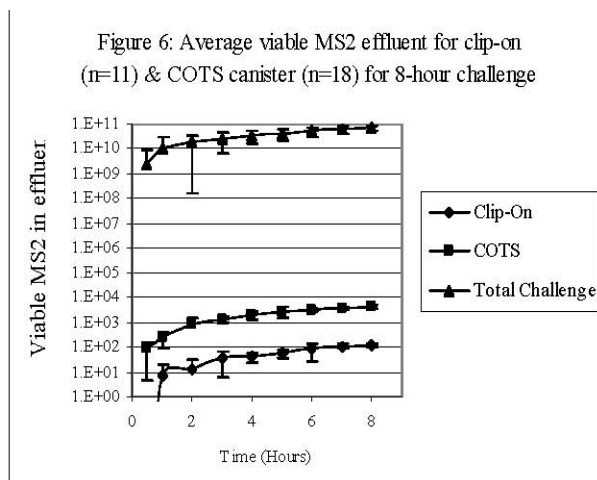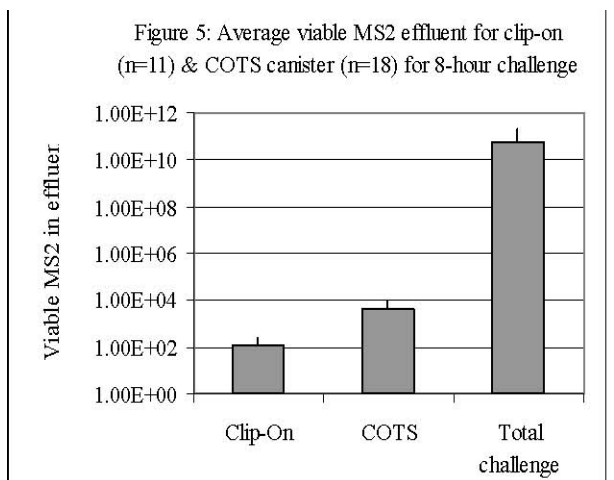

The use of MS2 for the initial testing of the canisters is appropriate because it allows for a relatively uncomplicated and quantifiable challenge. However, MS2 coliphage is much smaller (20 nm) than the bio-warfare viruses of interest (50 nm – 300 nm), therefore it may not be the ideal challenge organism. To fully demonstrate the concerns with the existing COTS canisters and the mitigating effects of the iodinated canisters, a mammalian virus, using tissue culture, needs to be used to challenge the filters. Ultimately we would like to challenge animals with effluents from the canisters to determine the bio-efficacy of the canisters.

CONCLUSIONS

MS2 coliphage penetrates COTS canisters at levels well above the MID for the bio-warfare viruses. This is not surprising given that HEPA filtration is only 99.97% efficient for filtering 300nm particles. We have shown that the addition of the iodinated clip-on prototype to existing COTS canisters offers added protection from MS2 penetration. For three of the prototypes the MS2 penetration was reduced to undetectable levels. MS2 coliphage, being very small may not be the most appropriate organism for challenging test articles. A mammalian virus challenge using tissue culture and live animals is being developed. This will allow for a more appropriate challenge of all the test articles.

REFERENCES

1. Arterburn, T. "Protecting HVAC Systems from Bio-Terrorism. 2003." *Journal of Healthcare Protect. Mgmt.* 19(2): 55–61
2. Boulton, F. Which Bio-Weapons Might Be Used by Terrorists against The United Kingdom?" 2003. *Medicine, Conflict and Survival.* 19:236–230
3. Franz, D.R., P.B. Jahrling, A.M. Friedlander, D.J. McClain, D.L. Hoover, R.W. Bryne, J.A. Pavlin, G.W. Christopher, E.M. Eitzen. Clinical Recognition and Management of Patients Exposed to Biological Warfare Agents. 1997. *JAMA.* 278(5): 399–411
4. Guide for the Selection of Personal Protective Equipment for Emergency First Responders. NIJ guide 102-00. Vol I. US Department of Justice, Washington DC, Feb 2002.

5. Hawley, R.J. and E.D. Eitzen Jr. "Biological Weapons—A Primer for Microbiologists." 2001. *Annu. Rev. Microbiol.* 55:235–253.
6. Ledberg, J. "Infectious Disease and Biological Weapons, Prophylaxis and Mitigation." 1997. *JAMA.* 278(5): 435–6
7. "NATO Hand Med. Aspects NBC Defensive Oper. AMedP-6(B), Part II—Biological.1996." in *NATO Handbook on the Medical Aspects of NBC Defensive Operations AmedP-6(b), Part II—Biological.* Washington, D.C.: Depts, Army, Navy, Air Force.
8. Sawicki, J. "Protection from Chemical and Biological Warfare." 1999. *Surg. Services Mgmt.* 5(9): 11
9. Strauss, J.H. and R.L. Sinsheimer. "Purification and Properties of Bacteriophage MS2 and of its Ribonucleic Acid." 1963. *J.Mol. Biol.* 7: 43–54
10. Tucker, J.B. "National Health and Medical Services Response to Incidents of Chemical and Biological Terrorism." 1997. *JAMA.* 278(5): 362–68